




D1102312
Rev1/Serial

Shutter Control

Shutter Controller Modifications:

1. Lift pin of U4 to disable the broken threshold disable feature
2. Add a 1M Ohm resistor at the threshold input to add a small positive offset to the threshold. This will allow the shutter to operate when threshold and trigger are not used and unconnected.

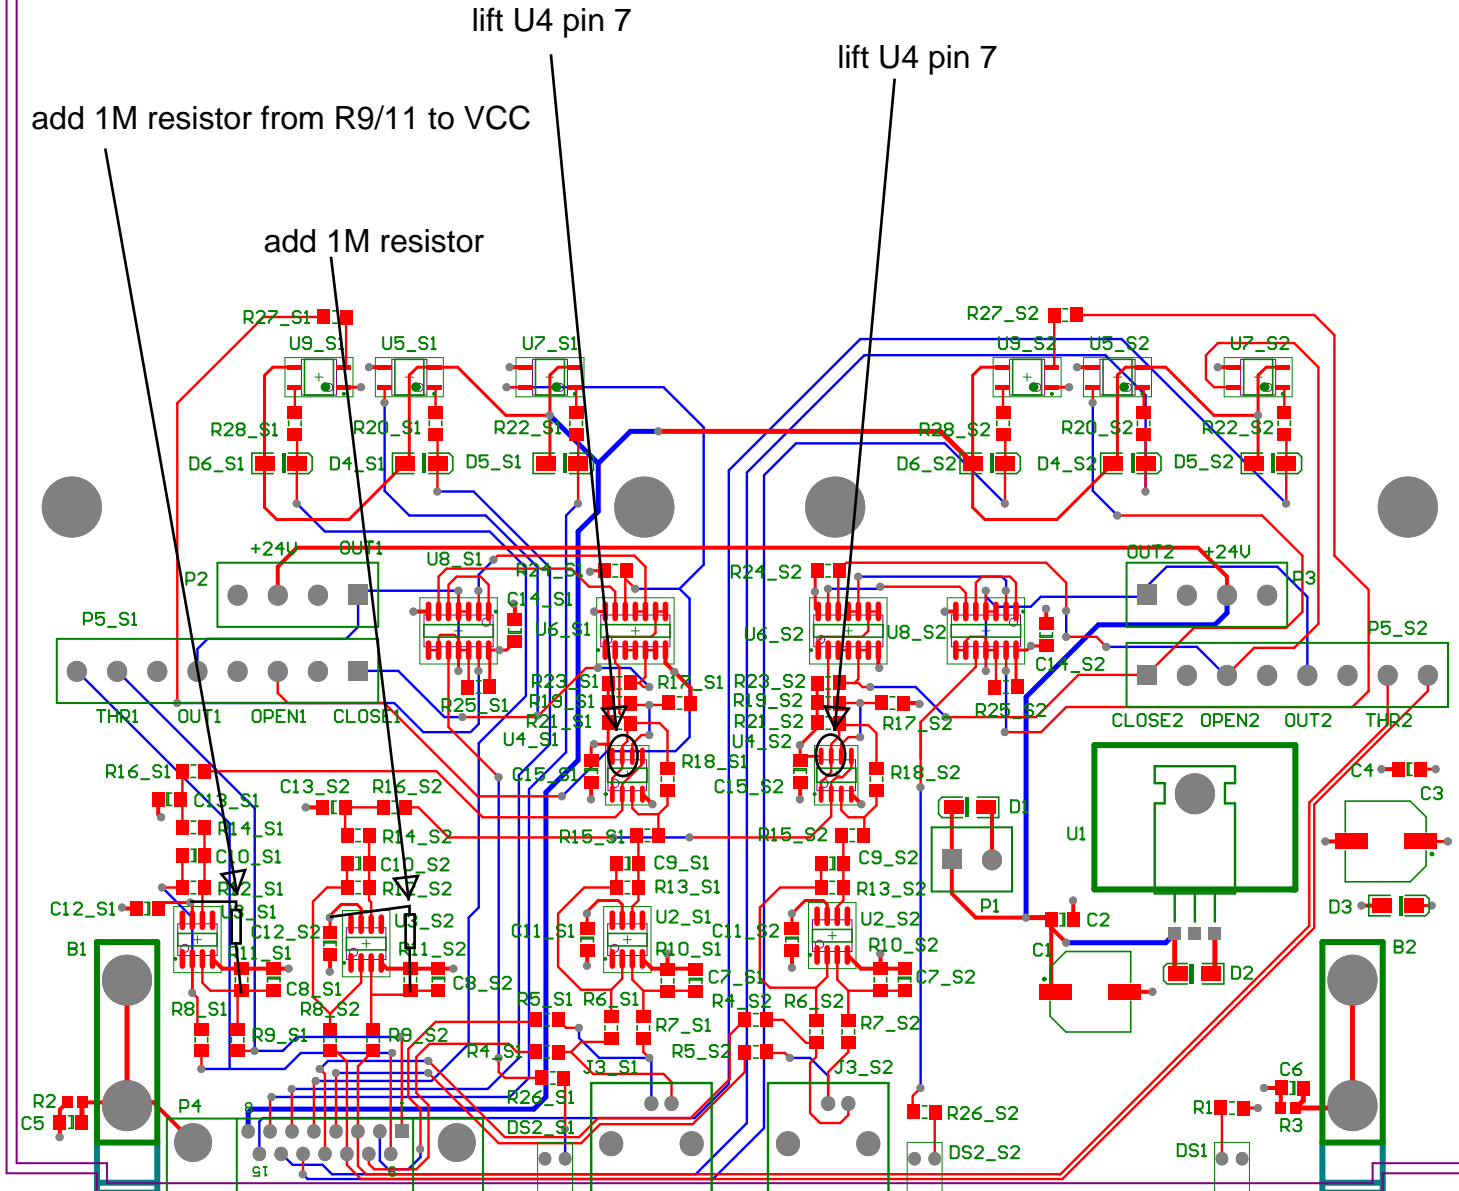

LIGO-E1300580-V1