


# Squeezer In-vacuum Controls Wiring Chain

VOPO

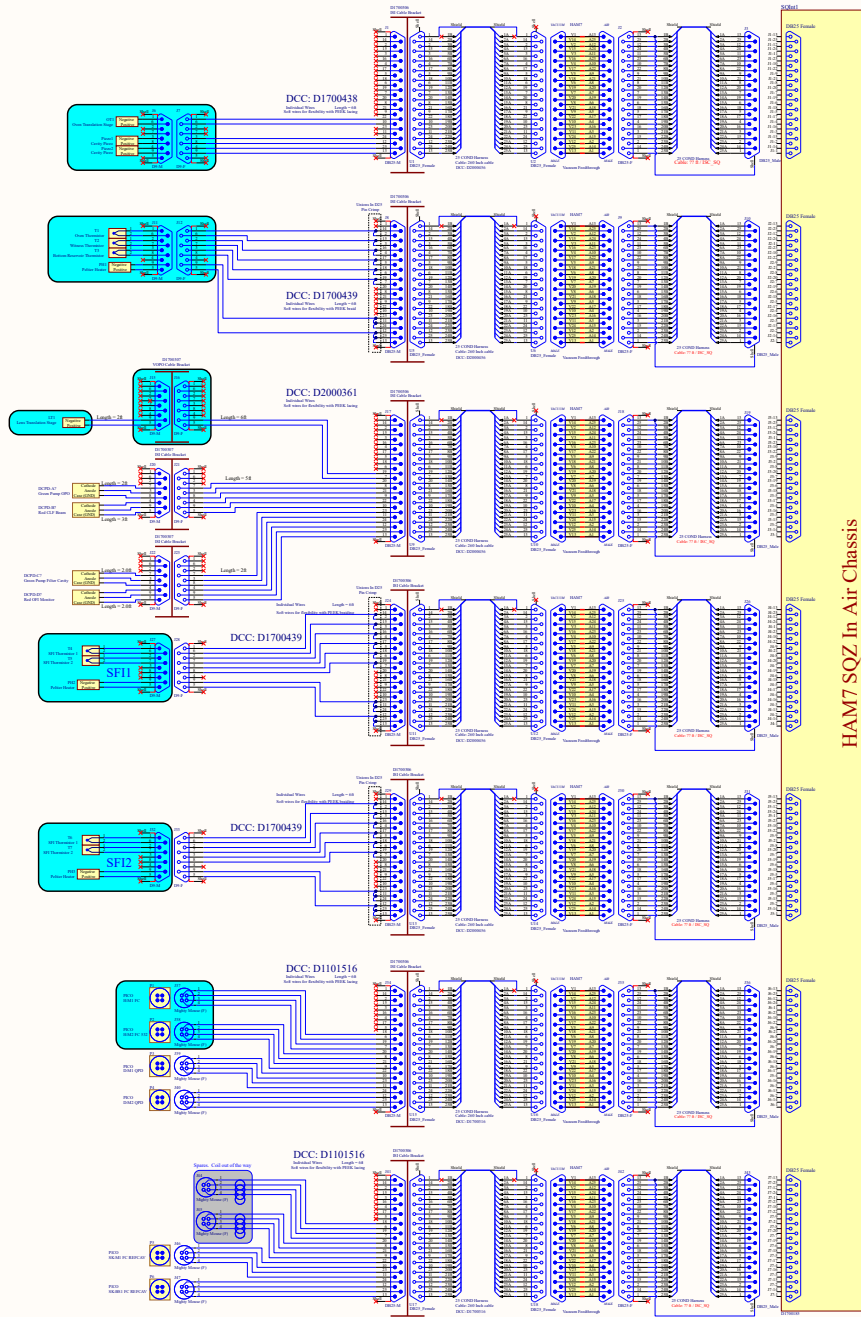

Questions  
 -Confirmation of lengths  
 -In air lengths  
 -First in-vacuum cables are currently 260in  
 -Spider Cable breakout lengths  
 -Feedthrough locations

