


NOTES CONTINUED:
 ⑤ SCRIBE, ENGRAVE, OR MECHANICALLY STAMP (NO INKS OR DYES) DRAWING PART NUMBER AND REVISION ON NOTED SURFACE FOLLOWED ON THE NEXT LINE BY A THREE DIGIT SERIAL NUMBER. SERIAL NUMBERS START AT 001 FOR THE FIRST ARTICLE AND PROCEED CONSECUTIVELY. USE .07" HIGH CHARACTERS. EXAMPLE: DXXXXXX-VY, S/N 001. A VIBRATORY TOOL MAY BE USED.

REV.	DATE	DCN #	DRAWING TREE #
-	-	-	-
-	-	-	-
-	-	-	-

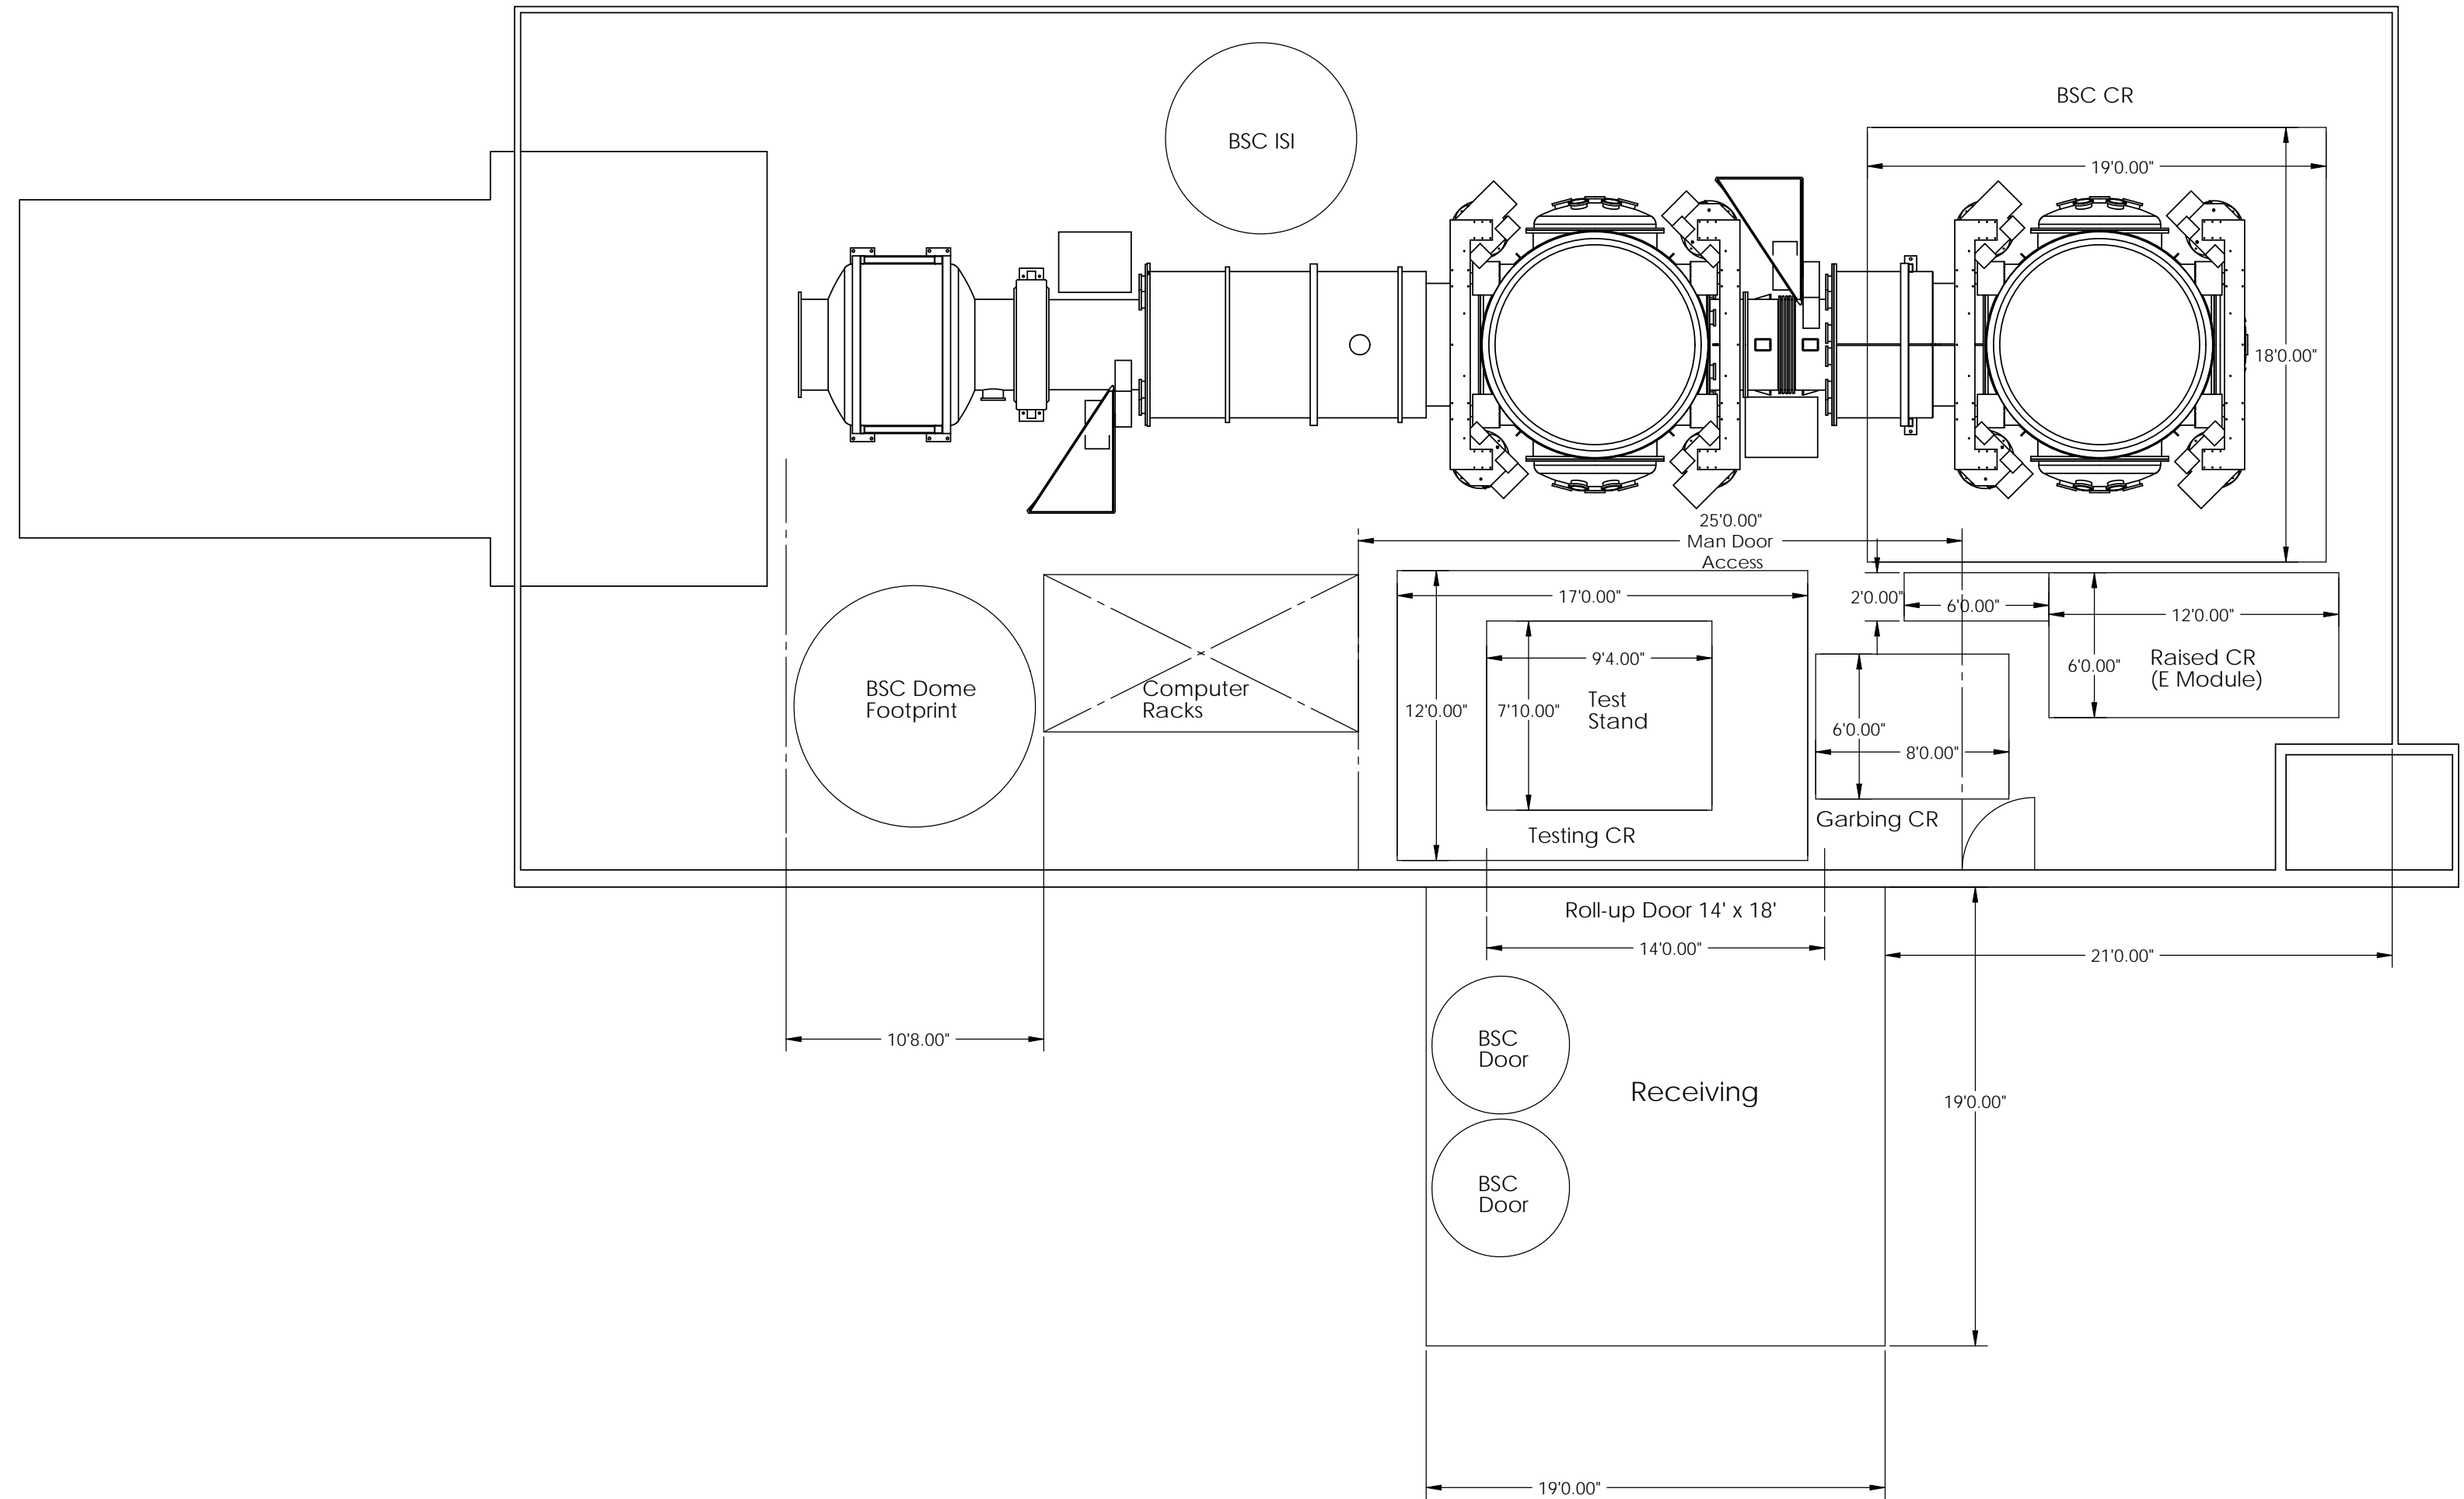

DIMENSIONS ARE IN		NOTES AND TOLERANCES: (UNLESS OTHERWISE SPECIFIED)		CALIFORNIA INSTITUTE OF TECHNOLOGY MASSACHUSETTS INSTITUTE OF TECHNOLOGY		PART NAME			
TOLERANCES: XX ± XXX ±		1. INTERPRET DRAWING PER ASME Y14.5-1994. 2. REMOVE ALL SHARP EDGES, R.02 MIN. 3. DO NOT SCALE FROM DRAWING. 4. ALL MACHINING FLUIDS SHALL BE WATER SOLUBLE AND FREE OF SULFUR, CHLORINE AND SILICONE, SUCH AS CINCINNATI MILACRON'S CIMTECH 410.		SYSTEM ADVANCED LIGO		SUB-SYSTEM FMP		aLigo LHO Endstation Cleanroom Layout	
ANGULAR ± °		MATERIAL --		FINISH -- μinch		DESIGNER		SIZE DWG. NO.	
				NEXT ASSY		DRAFTER		D 1001797	
						CHECKER		REV. 1	
						APPROVAL		SCALE: 1:128 PROJECTION:	
								SHEET 1 OF 1	

D:\001\68\ADVANCED Systems\Layout\LHO_X_End Station_PARR\PMI\REV_X.016_DRAWING_PDM.REV